
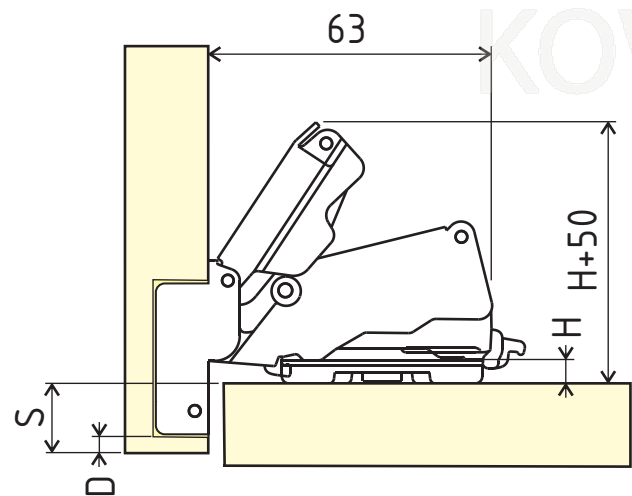


Možnosti nastavení

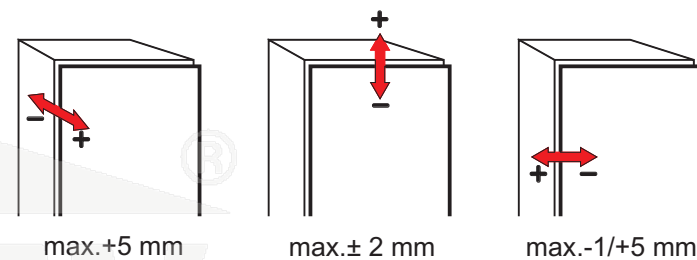

VZDÁLENOST MISKY OD HRANY (D)

	17	18	19	20	21	22
4	17	18	19	20	21	22
5	16	17	18	19	20	21
6	15	16	17	18	19	20
7	14	15	16	17	18	19
8	13	14	15	16	17	18
9	12	13	14	15	16	17
10	11	12	13	14	15	16

H = 18 + D - S

Doporučený počet závěsů

